


单页尺寸100x155mm

***EverBrite***

**RECHARGEABLE PEN LIGHT**

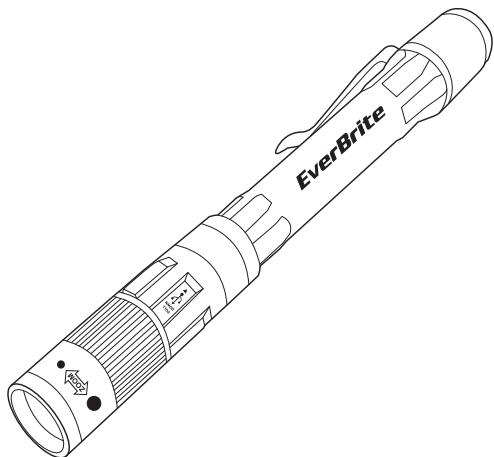


E101085A  
E101086A

### User Manual

Thank you for purchasing EverBrite products, please read this manual carefully before use, and keep it for future reference!

### IN THE BOX

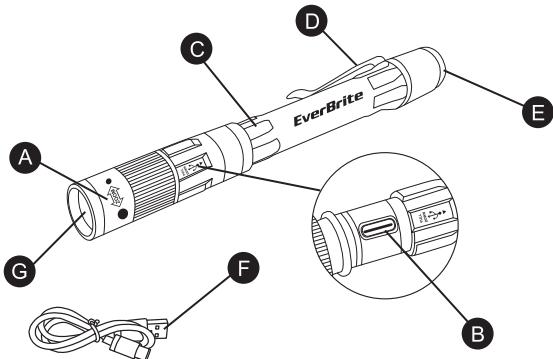

Part	Description
A	Zoomable Head
B	Type-C Charging Port
C	Aluminum Body
D	Pocket Metal Clip
E	Tail Switch (ON/OFF)
F	USB Charging Cable
G	Osram LED

When unpacking the box, do not discard any packaging materials until all of the contents are accounted for:

1. 1 x Rechargeable Pen Light
2. 1 x USB charging cable
3. User manual

## PARAMETER DESCRIPTION

Dimensions	153(L) x 18(W) x 18(H)mm / 6.02(L) x 0.71(W) x 0.71(H)in.
Weight	60g / 2.1oz
Material	Aluminum alloy steel
Battery	Built-in 1 x 3.7V 750mAh 10850 rechargeable lithium battery, charged with standard mobile phone charger (5V 1A)
Charging Port	Type-C charging port
Charging Time	about 2-3 hours

	High	Med	Low	Strobe
 LUMENS Brightness (LM)	300LM	150LM	30LM	/
 Run Time (hrs)	2h	5h	9h	/
 Beam Distance(m)	Spotlight	60m	40m	20m
	Floodlight	30m	20m	10m

- The above-mentioned parameters tested based on ANSI FL1-2009 standard, may vary between lights, batteries and environments.

## OPERATING INSTRUCTIONS

### 1. Charging the Pen Light

Charge your Pen Light with supplied cable or other Type-C USB cable.

Connect it to any 5V USB port such as power adapter, power bank, computer USB port etc.

- Charging: **RED** light
- Fully Charged: **BLUE** light
- Charging Time: about 2-3 hours

## OPERATING INSTRUCTIONS

### 2. Operate the Pen Light

Press the Tail Switch Button to cycle through **High - Medium - Low - Strobe - Power OFF**.




#### NOTE:

- Do not operate the pen light while charging. The pen light does not work when plugged into charge.
- Under any mode, press and hold the Tail Switch Button more than 2 seconds to turn off the pen light directly.
- The pen light memorizes the last brightness level. The next time it is turned on, it will recall the previously used brightness level.

### 3. Spotlight and Floodlight Adjustment

Rotate the focusing ring to regulate between spotlight and floodlight(as below photo). The factory default is floodlight.

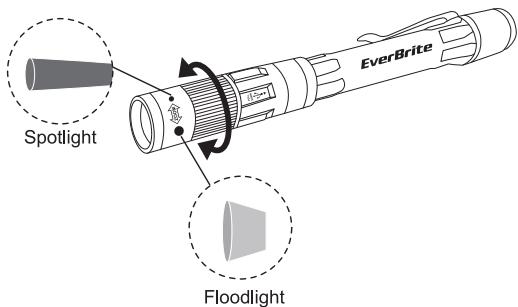

## USAGE AND MAINTENANCE

- Battery comes 50-80% charged so they can be used right away, however it is recommended that you fully charge the battery when received.

- Once fully charged, be sure to disconnect the USB charging cable.

- Recharge a stored battery every three months to maintain optimum performance of the battery.
- DO NOT attempt to open battery.
- Do not operate the product in explosion hazardous areas or in aggressive environments.

## WARNING

1. The pen light projects a very bright beam of light and can cause eye damage to the user or others. Avoid shining the pen light directly into anyone's eyes.
2. The pen light is NOT TOY - not recommended for use by children without supervision. Keep out of reach of children.
3. NEVER dispose of batteries in fire, as they may leak and explode.
4. Dispose according to local, state, or federal regulations.
5. Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## ENVIRONMENTAL PROTECTION



Do not dispose with domestic waste. Use special collection points for sorted waste. Contact local authorities for information about collection points. If the electronic devices would be disposed on landfill, dangerous substances may reach groundwater and subsequently food chain, where it could affect human health.



Distributed by:  
Hangzhou GreatStar Industrial Co., Ltd  
No.35 Jiuhuan Road, Jiubao Town,  
Hangzhou 310019, China  
[www.greatstartools.com](http://www.greatstartools.com)  
Made in China